

C10 Communications C10345E Wall Mount Filter/Splitter Installation Guide



Step 1

Remove the Wall mounted Telephone from Wall Plate

(Push the Telephone upward gently until it is released from the mounting screws).



Step 2

Separate the Telephone from the Wall Plate by detaching the short cable from the Wall Plate.



Step 3

The Wall Mount Filter/Splitter is shipped with its Top & Bottom latches opened. (if not already opened, use a small flat screw-driver, insert in to the slot at latch & gently bend toward the mounting screw to open the latches)



Step 4

Align the Wall Mount Filter/Splitter, and plug on to the Wall Plate.

Step 5

Hold the Wall mount Filter/Splitter toward the Wall Plate while pressing the latches in fully to lock in to the Wall Plate (The wall mount Filter and Wall plate should hold securely as if they are in one piece).




Step 6

Auxiliary RJ-11/45 Jacks are provided for additional Fax/Phone (filtered), and ADSL Modem. If you also want to connect an ADSL modem here, plug the Modem cable to the BOTTOM right hand side RJ11/45 Socket provided, or do nothing. (Remove grey colour adaptor if required)



Step 7

Plug the telephone short cable to the "Phone" socket of the Wall mount Filter/Splitter. Ensure that the short cable is not interfering while aligning both bracket's mounting holes with the mounting screws on the Filter/Splitter, After alignment, push the phone down gently to latch

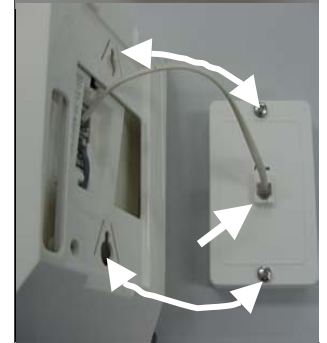

Step 8

Installation complete. Test the Telephone works as normal (Listen to dial tone, or dial to your friend for testing connection)

