



C10645 E Filter/Splitter Installation

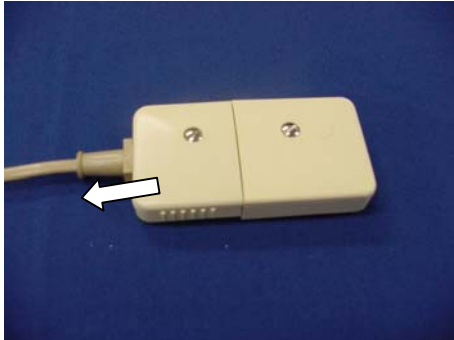

Step 1


Remove the Telephone Plug from the 600 series Wall Socket

(If the Telephone Plug can not be removed easily, check fixing screw in socket as per Picture 8).

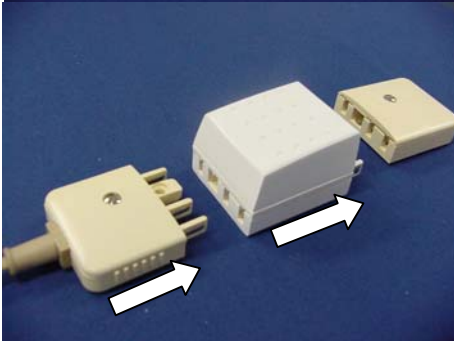

Step 2

Install the ADSL Filter/Splitter Model C10645E between the Wall Socket & Telephone Plug

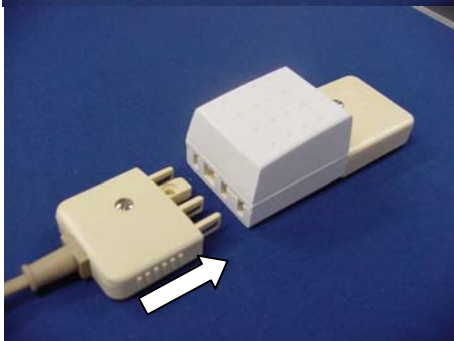

Step 3

Plug the ADSL Filter/Splitter Model C10645E to the Wall Socket.

(If required, Secure the Filter Plug to the Wall Socket, as reverse of Picture 8)




Step 4

Plug the Telephone Plug to the back of the ADSL Filter, and test if the Telephone works as normal (listen for dial tone, dialling, ringing etc...)

Step 5

The ADSL Modem (if any) can be installed to the RJ-11/45 Socket provided in the Filter/Splitter.

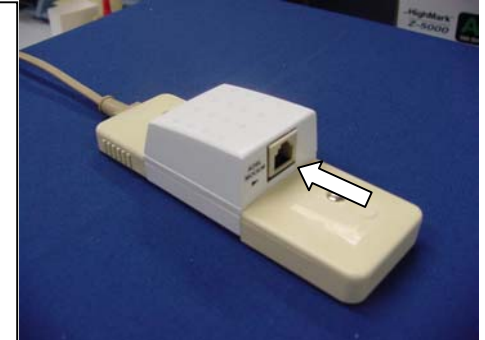

Step 6


Installation completed.

(If the Modem Plug is too big (ie RJ-45 plug), and can not plug in , please refer to Picture 7).



Picture 7

(If the Modem cable Plug is too big (ie RJ-45 plug), and can not plug in, please remove the 8P-to-6P adaptor insert, before plugging in the ADSL Modem Cable to the Filter/Splitter)

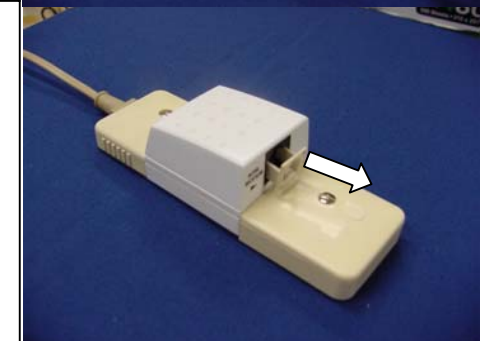

Picture 8

(If the Telephone Plug can not be removed easily, check fixing screw in socket, by opening the wall socket cover, and remove the fixing screw).

